

Optimize Your Station for DX - Reduce RFI on TX & RX -



Bob Brehm, AK6R
Chief Engineer
Palomar-Engineers.com

Mabuhay DX Grand Eyeball - April 2024
This presentation available on website
Copyright 2013-2024 Palomar Engineers, Inc.

Palomar Engineers Short History

- Founded in 1965 by Jack Althouse, K6NY
- Reorganized in 2013 as RFI Solutions & Antenna Company
- **Objective:** Provide products that make radio communication more effective & enjoyable
- **Product Line**
 - Ferrite Core Products
 - Baluns, Ununs, Feedline Chokes & Coax Noise Filters
 - Antenna Systems (OCF, End Fed, Loop, Terminated)
 - RFI Solution Kits for Ham, Commercial, Household
 - Kurt Sterba Books/Downloads
- **Distribution:** Ham Radio Outlet, Direct, eBay
- **Markets:** Consumer, Commercial, and Military

How to Optimize your shack


Optimize Your Shack Objectives

- Maximize Transmit Effectiveness with more signal to antenna
 - Suppress transmitter RFI to localized victims
 - Stop coax braid radiation causing local RFI and matching issues
 - Work more stations with multi-band wire antennas
- Minimize Receive Noise floor to hear more stations
 - Suppressing receive noise sources – using ferrites
 - Using coax noise filters
 - Minimizing Antenna Switch Noise Issues
- Work more DX using multi-band end fed wire antennas
- Understand CONCEPTS with little or NO MATH required



Thinking cap time..... RFI & you

Are you the **SOURCE** of RFI?

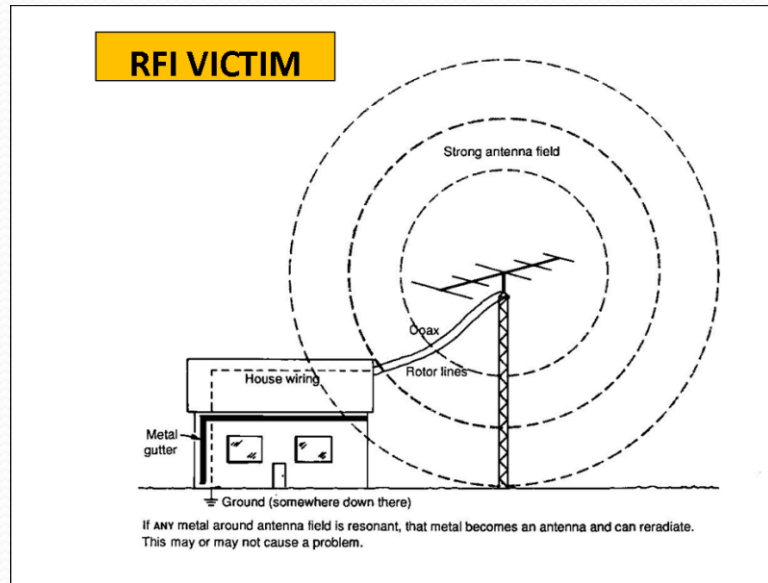

IT'S ALL YOUR FAULT WITH THAT BIG ANTENNA!

Maybe you got an award!



RFI Solutions from KHz to GHz

Worked All Appliances

AWARDED TO

Amateur Radio Station _____

Who has caused persistent Radio Frequency Interference (RFI)
to electronic appliances adjacent to the ham radio station

Awarded this ____ day of _____, 20__

RFI Case Endorsements:



Bob Brehm, AK6R
Chief Engineer



RFI Solutions from KHz to GHz



WORKED ALL NEIGHBORS

AWARDED TO

Amateur Radio Station _____

Who has caused persistent Radio Frequency Interference (RFI) to neighbors adjacent to the radio station


Awarded this ____ day of _____, 20__

RFI Case Endorsements:



Bob Brehm, AK6R
Chief Engineer

Are you a **VICTIM** of local RFI?

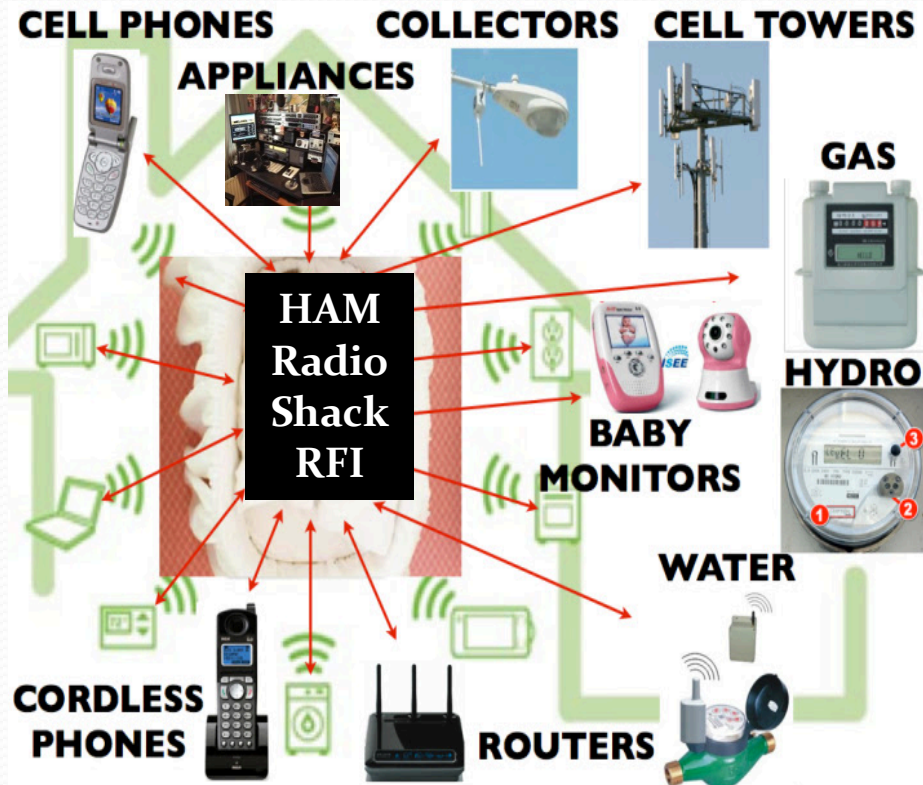

RFI Sources

- Ham Antenna
- Radiating Coax
- Electronic Devices
- Solar Systems
- Grow Lights
- HVAC motor
- Plasma TV
- DSL/Routers
- Switching power Supplies
- Washer/Dryer or other appliances

QRN - High Noise Floor – Weak Signals – NO DX – No fun!

Source or Victim – we can help!

What is RFI?

What is RFI?




- *A radio frequency (>100 KHz) disturbance that causes an electrical circuit to function improperly*

Common Sources

- Sunspots, Cosmic noise, Lightning, atmospheric static, AC power lines (**no ferrite fix**)
- “Transmitters” - Ham, CB, AM/FM, electronic devices, speed controllers, inverters, switching power supplies, computer electronics, Cable/DSL/Ethernet (**can use filters to fix**)
- Common Victims
 - Any electronic device that malfunctions by acting as an unintended “receiver” of RFI

How do you get RFI?

How RFI is Transferred

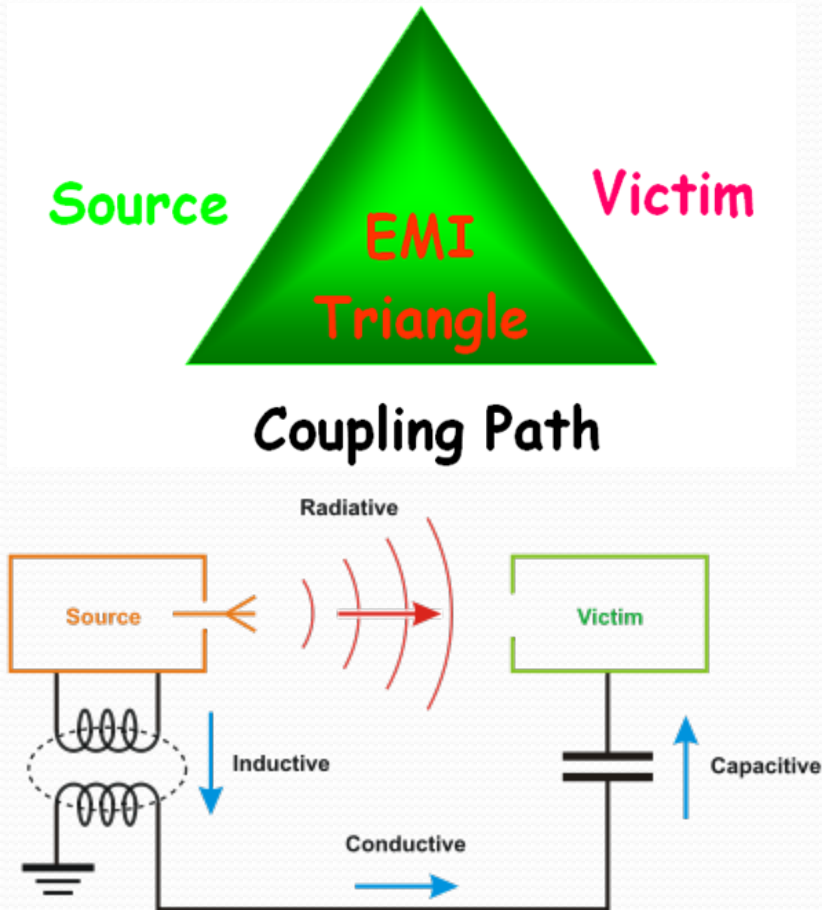

Source (antenna) and **Victim** (antenna) coupled via **Path** (all must be present to have RFI)


Multiple paths are very common:

1. Radiative - air
2. Conductive – wire(s)
3. Inductive - wire
4. Capacitive - wire



How to find the source & path

Typical RFI in your shack/home


- **TX Symptoms** – caused by your transmitter or antenna
 - Hot microphone – RF lip burns, distorted audio
 - Antennas don't tune correctly, high SWR, radiating coax
 - Your voice/transmission causes interference with consumer electronic devices acting as ham radio frequency “receivers” (e.g. computers, TV/audio system, security system, garage door opener, telephone, sprinkler systems, lights, etc.)
 - Spouse Alarm goes off! 
- **RX Symptoms** – caused by sources outside your radio
 - High receive noise level not due to atmospheric conditions
 - Birdies, chirps, buzzes, clicks, broadband noise on receiver
 - Distorted receiver audio

Typical RFI receiving “antennas”

- **AM broadcast, 160-80-60-40-30 meter RFI** – look for long “antennas” - AC power lines, telephone/DSL lines, satellite/cable coax, long Ethernet cables, antenna feed line coax shield, antenna control/rotor cables, 2nd story ground wires (avoid $\frac{1}{4}$ wavelength ground wires, e.g. 16 Feet)
- **FM broadcast, 20 meter to 450 MHz RFI**,– look for short “antennas” - speaker wires, device interconnect cables, mic cables, short Ethernet cables
- “Antennas” pick up radiated or conducted RFI which induces a common mode current on ALL unshielded “antenna” conductors from an RFI SOURCE

So how do we reduce this current?

Reduce RFI current to reduce RFI!

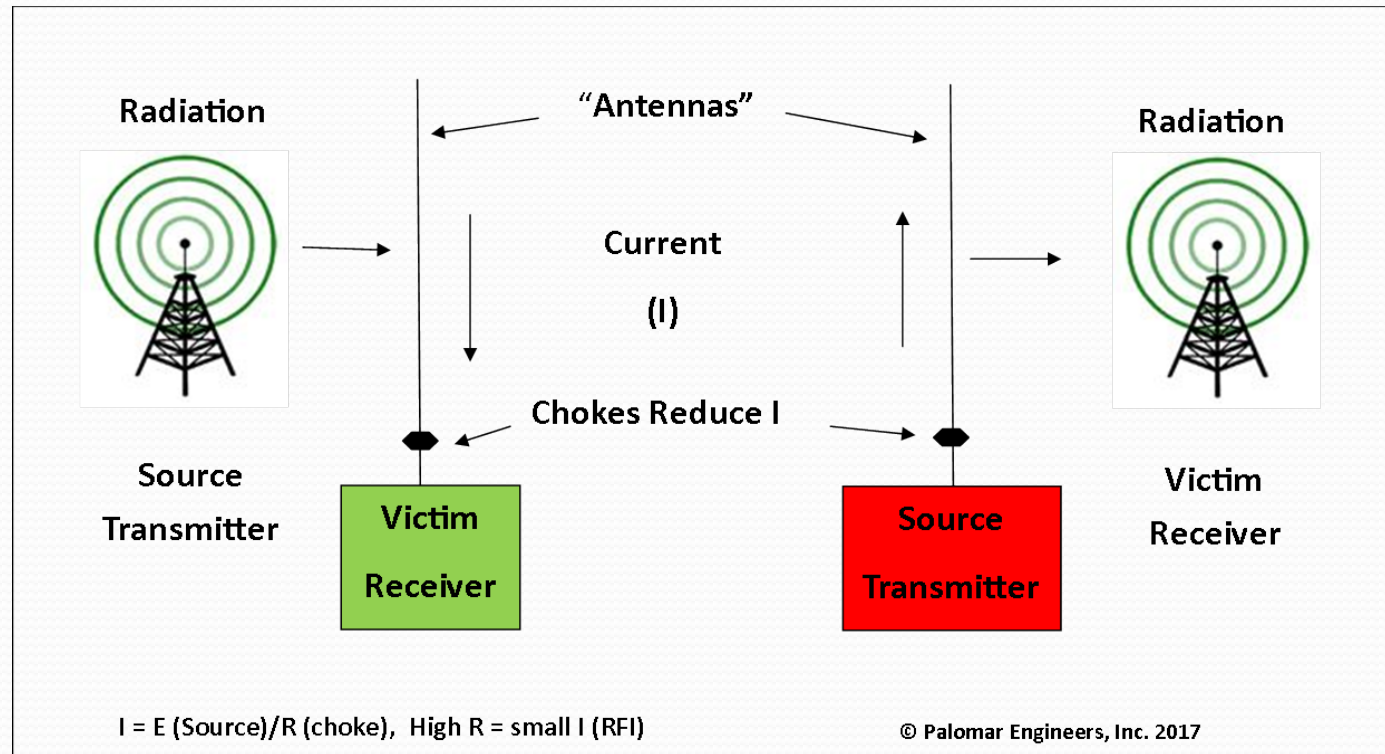

- Typical solutions: Resonant traps, ferrites, filters with high choking impedance



Ohms law is your answer

Stop RFI = Minimize Current

I (RFI Current) = E (RFI induced voltage)/ R (Choking resistance)

- Shut down the SOURCE (Set E to zero)
- Choke the PATH (minimize I , increase $R > 1000 \Omega$)
- Protect the VICTIM (Set R very high, $> 5000 \Omega$)



Objective: Minimize RFI current, I

Trivia Q: Why is current abbreviated with I and not C ?

Ferrites are your friends to cure RFI



Ferrite Fundamentals

How to:
Select - Buy - Configure
and Apply



Ferrite Topologies (Shapes)



Slip On Bead



Snap On Bead



Toroid or Ring



Fuzzy Ferret – not!

FERRITE CHARACTERISTICS


- Cheap, easy to install, suppress RFI from 100 KHz - 2 GHz
- Work on all conductive paths (antenna & feed lines, AC/DC, I/O cables)
- Lots of options in size, shape, frequency range to suppress RFI currents
- Are effective if you understand how ferrites work, how to choose the correct ferrite and where to install the ferrite for a particular RFI problem

Ferrite characteristics can be used to reduce RFI common mode current


How do Ferrites Work?

Ferrites are frequency dependent “resistors”

Simple Equivalent Circuit

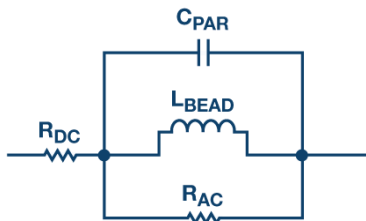

(a)

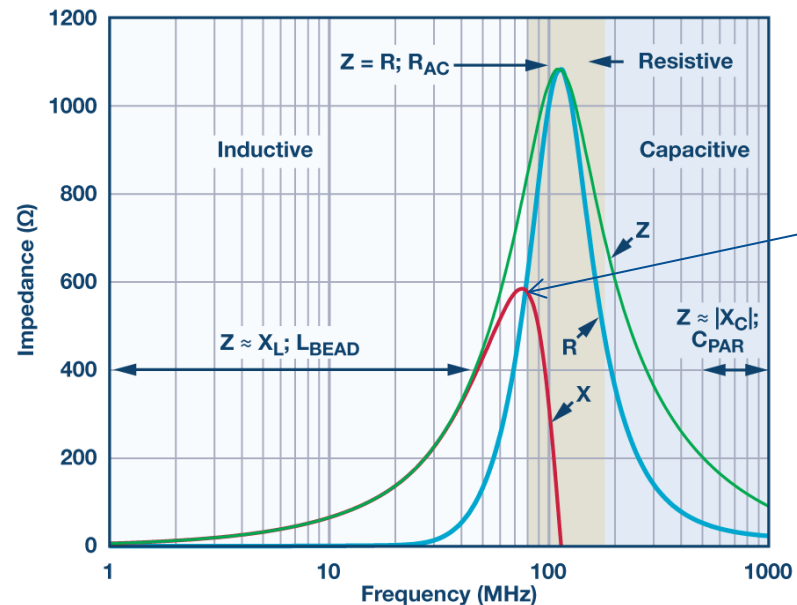


(b)

Ferrites are categorized by three response regions: inductive, resistive, and capacitive. To reduce high frequency interference (noise), the ferrite must be used in the resistive region where it acts like a resistor ($R = F(\text{MHz})$), which impedes the RF frequency noise (current) and dissipates it as heat.

How can resistance be increased?

Ferrites act like resistors-F(MHz)

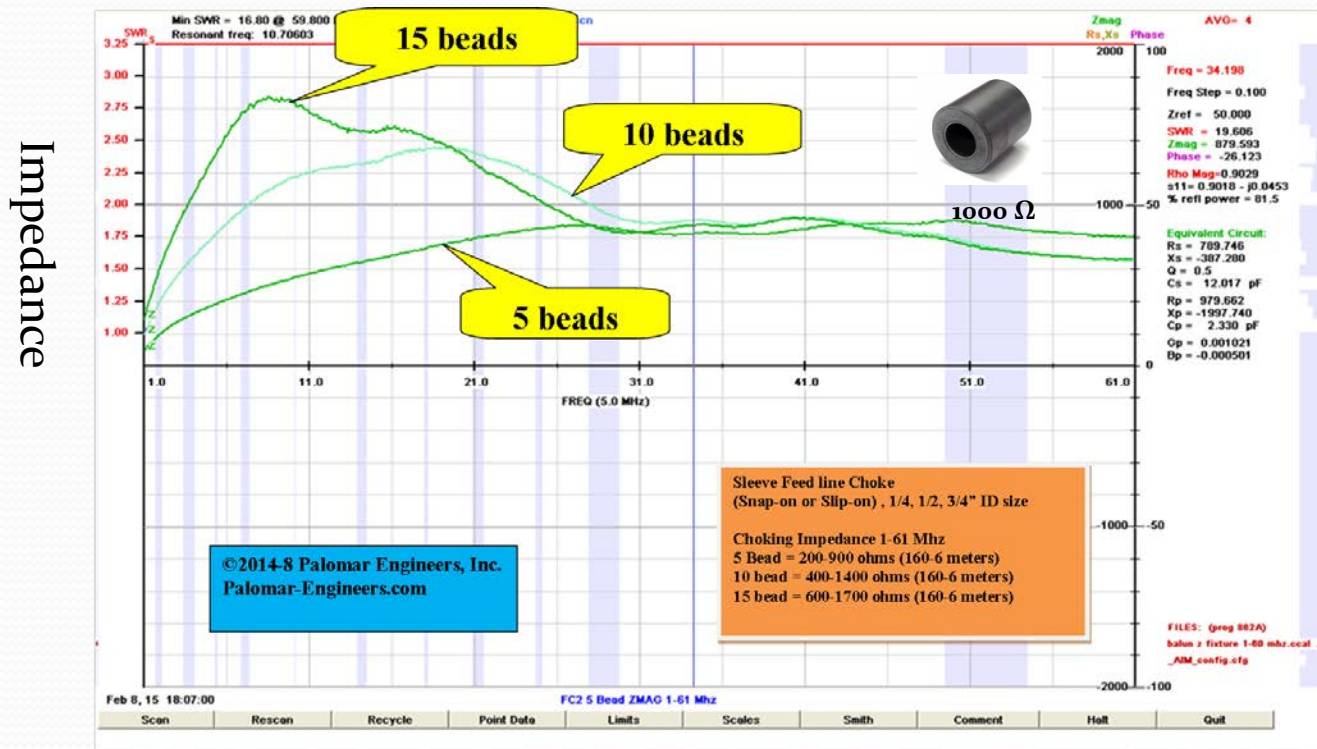

beads add resistance in series, but frequency dependent

higher choking R (up to 30 MHz in this example)

At 7 MHz:

5 beads = 400Ω

10 bead = 1000Ω

15 beads = 1600Ω

Feedline Chokes



Frequency (1-60 MHz) →


Impedance (Z) = Resistance +/- Reactance

Ferrites have one more additional very useful property...


Ferrite resistance increases as (turns thru center hole)² ←




- If 1 turn = R, 2 turns = 4 x R, 3 turns = 9 x R
- More R = less RFI wire current, I = less RFI radiated from wire or induced into wire. ($I=E/R$)
- **General rule: choking $R > 10X$ line impedance**
- (e.g. $> 500 \Omega$ for 50Ω cable but 5000Ω is 10x better)

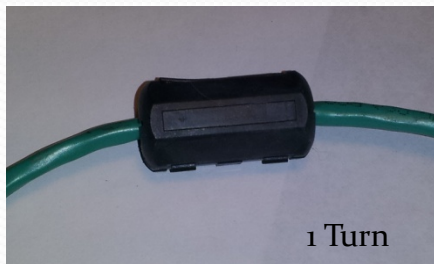

1 Turn

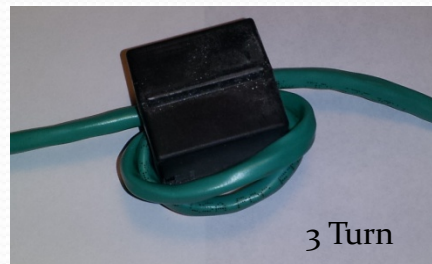

3 Turn

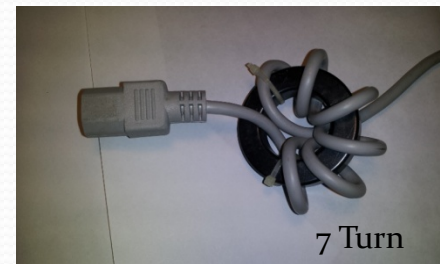

7 Turn


7 MHz: 100Ω (1 turn)

900Ω (3 turn)

4900Ω (7 turn)

Question: How do we choose the correct ferrite for the RFI frequency?

Ferrite chemicals (Mix) determines effective frequency range

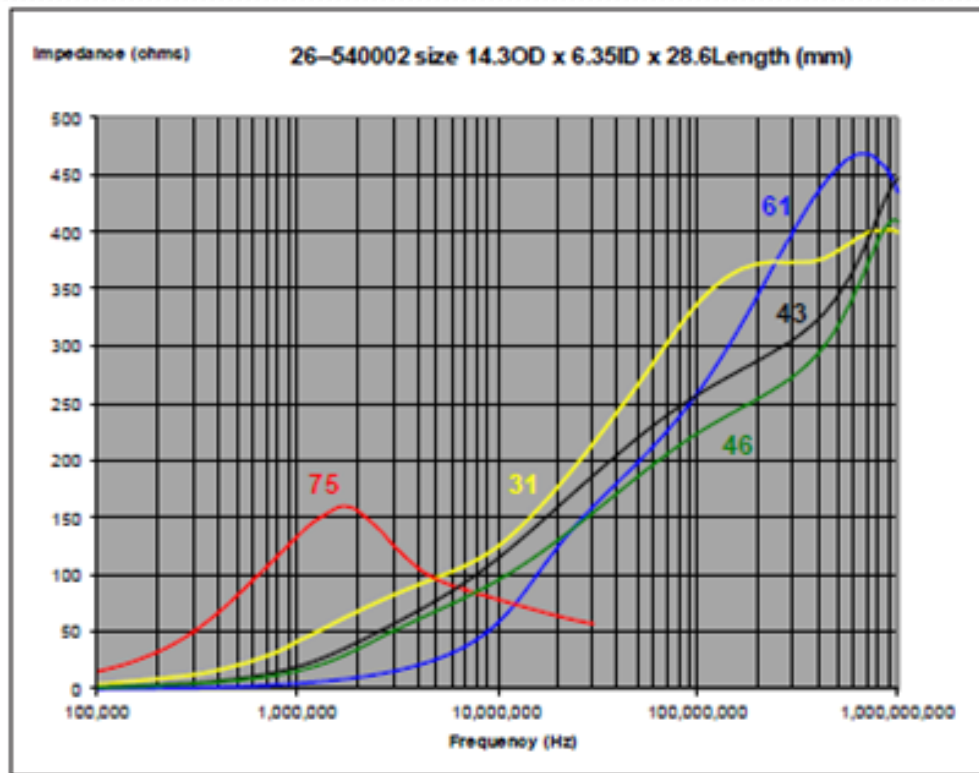

Mix = chemical formula of the iron oxide with manganese-zinc (31, 75) or nickel-zinc (43, 61)

RULE:

Select mix for max R at RFI FUNDAMENTAL frequency NOT frequency of receiver.

Example:

for .1-5 MHz use mix 75

for 1-300 MHz use mix 31

for 20-250 MHz use mix 43


for 200-2000 MHz use mix 61

Most popular ham frequency mixes are 31, 43, 61, 75.

Select mix based on RFI Frequency example – multi-bead sleeve choke

Match RFI Frequency to Mix

Mix 75 up to 10 dB better under 3.75 MHz!

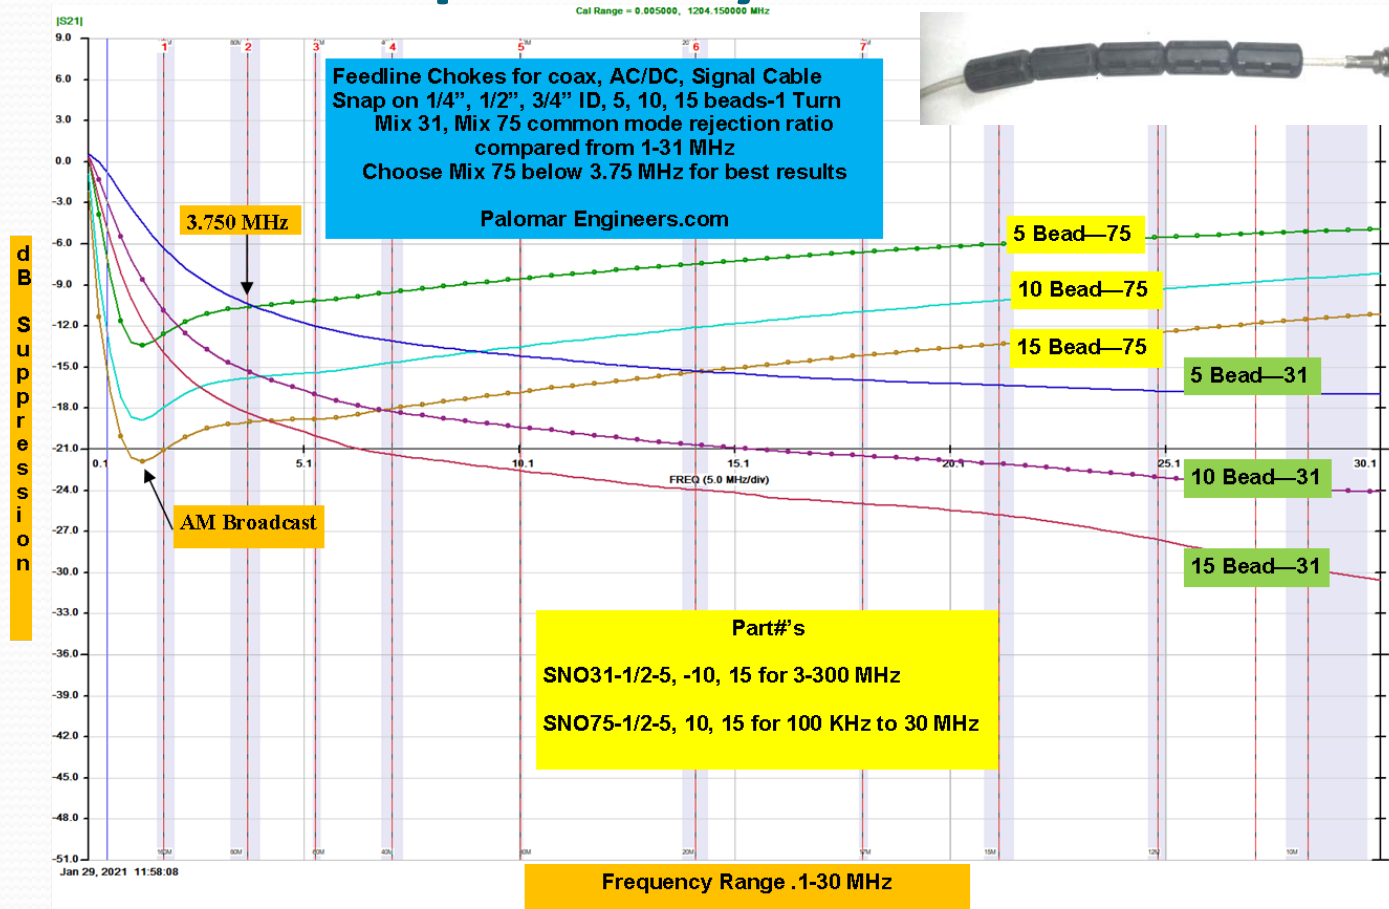

Selecting wrong or unknown mix will probably not work so.. How NOT to buy

How NOT to buy ferrites!



Amazon/eBay



Swap meet

=

DON'T

BUY!!!

- NO Mix Designation
- NO Resistance/Impedance Range
- NO Frequency Range = No No No!
- Like Buying a resistor with an unknown resistance!

Buying unknown ferrites is like buying a box of rocks - a waste of time and money!

Another Alternative?

How to buy Ferrites the **right** way!



Ferrite Split Bead
10 Pack -1/2" ID – Mix 31
RFI Range: 1-300 MHz
Part#: FSB31-1/2-10

Single turn, each bead provides:

MHz	5	10	25	100	250
Ω	71	100	156	260	260

(2 turns=4X Ω , 3 turns =9X Ω , 4 turns = 16X Ω)

AC/DC/Coax/Audio-Video/Data Cables

Use multiple turns for best results

=

**BUY With
CONFIDENCE!!**

Product Labeling (Mix, Frequency, Impedance) + Known Vendor = Winner!

So let's recap RFI 101

Ferrite Use Recap

- Determine RFI interfering frequency & suspected Path
- Choose proper mix (31, 43, 61, 75) to suppress RFI fundamental frequency
- Choose Topology (slip-on, snap-on, ring) to fit the Path
 - Install ferrites on path – retest for RFI suppression
 - Consider additional ferrites or paths if RFI persists

Most popular Mix for HF is MIX 31 (1-300 MHz)
(Mix 75 for .1-5 MHz, Mix 61 for 200-2000 MHz)

Subtle Note: Mix frequency ranges shown are for RFI suppression only. Mix frequency ranges for use as impedance transformers (2:1, 4:1, 9:1, 49:1, etc) are different. NEVER use mix 31 for an impedance transformer as it has too much resistance and will heat up & easily saturate at low power.

How and where do you put the ferrite filter for transmitter RFI?

GOAL:

STOP TRANSMIT RFI

Tip # 1: RFI Kits for HF Transceivers and Linear Amps

Tip # 2: Minimize coax cable radiation (HF or VHF)

Tip # 3: Install Solution Specific RFI Kits for VICTIMS



Tip #1 - Install Transceiver, Linear Amp RFI Filters

**Goal: Minimize SOURCE RFI from radio and
amplifier “antennas” & cables**




RFI Filters for Transmitters/Amps

- Transmitter – Amplifier - Antenna RFI suppression
 - Choke ALL cables into/out of radios, amplifier, antenna tuners
 - Includes
 - Coax RF feed lines at antenna feed point to suppress TRANSMIT RFI
 - Rotor/Antenna Control lines
 - AC/DC power Lines including wall warts!
 - Computer – all radio interconnects, AC power
 - Examples on next slides
 - Recommendation: Filter ALL cables to equipment using Palomar transceiver, amplifier and computer RFI kits with mix, sizes, instructions already pre-determined by brand.

Buy it – Install it – Problem solved!

Power Supply, Transceiver/Amp Example

Switch Mode Power Supply Filters

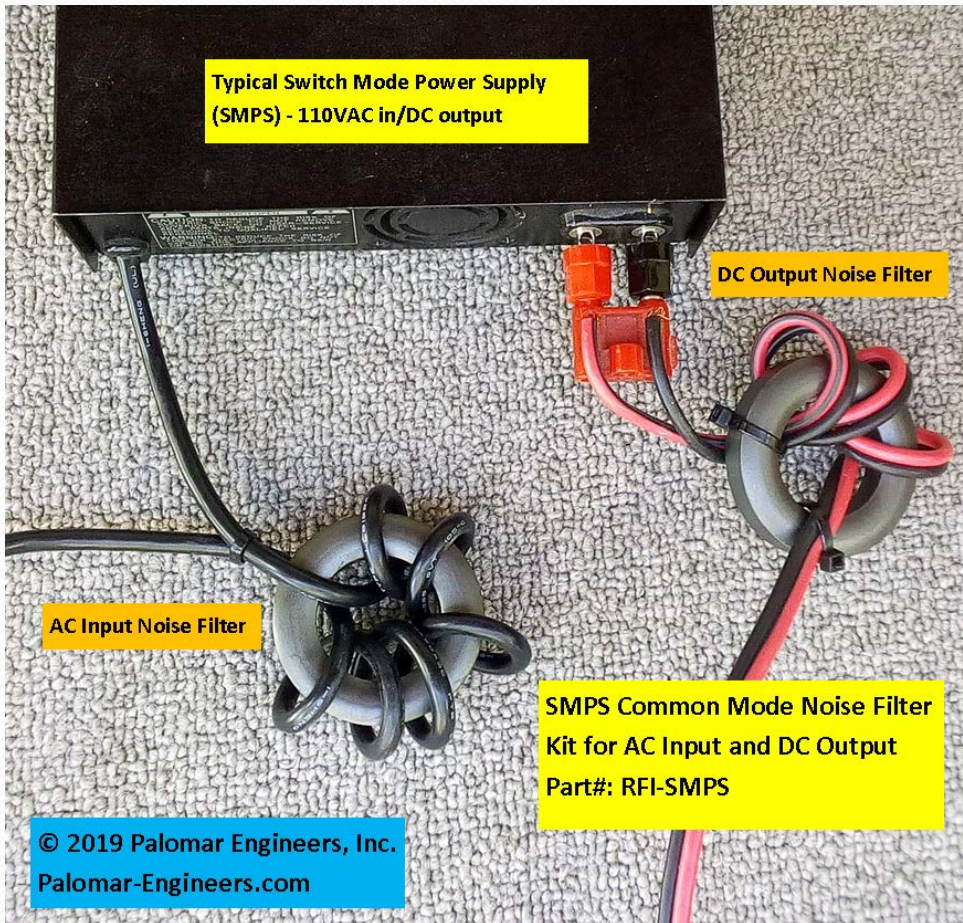


SMPS may act as an RFI transmitter and uses DC cable and AC power line as its “antennas” – so filter both lines using Mix 75 to suppress switching frequency fundamental (< 2MHz) and all harmonics in ham bands.

Transceiver Kits

Transceiver RFI Kits


Palomar has RFI kits for all brands of transceivers

Transceiver Standard RFI Kit

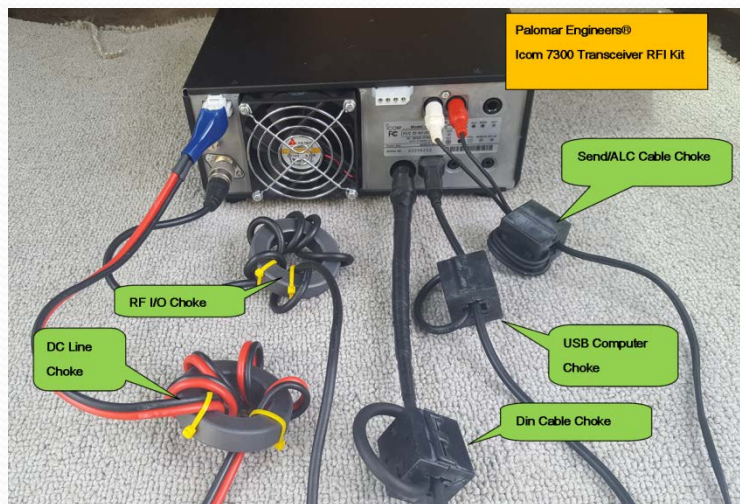

ICOM 7300


Transceiver Deluxe RFI Kit with NF

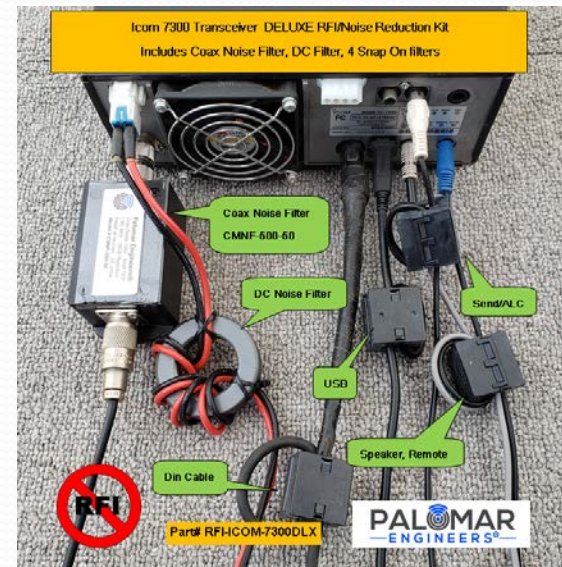

Clean up the RFI **SOURCE** first – your radio

Flex Radio Kits too!

FLEX Station RFI Kits

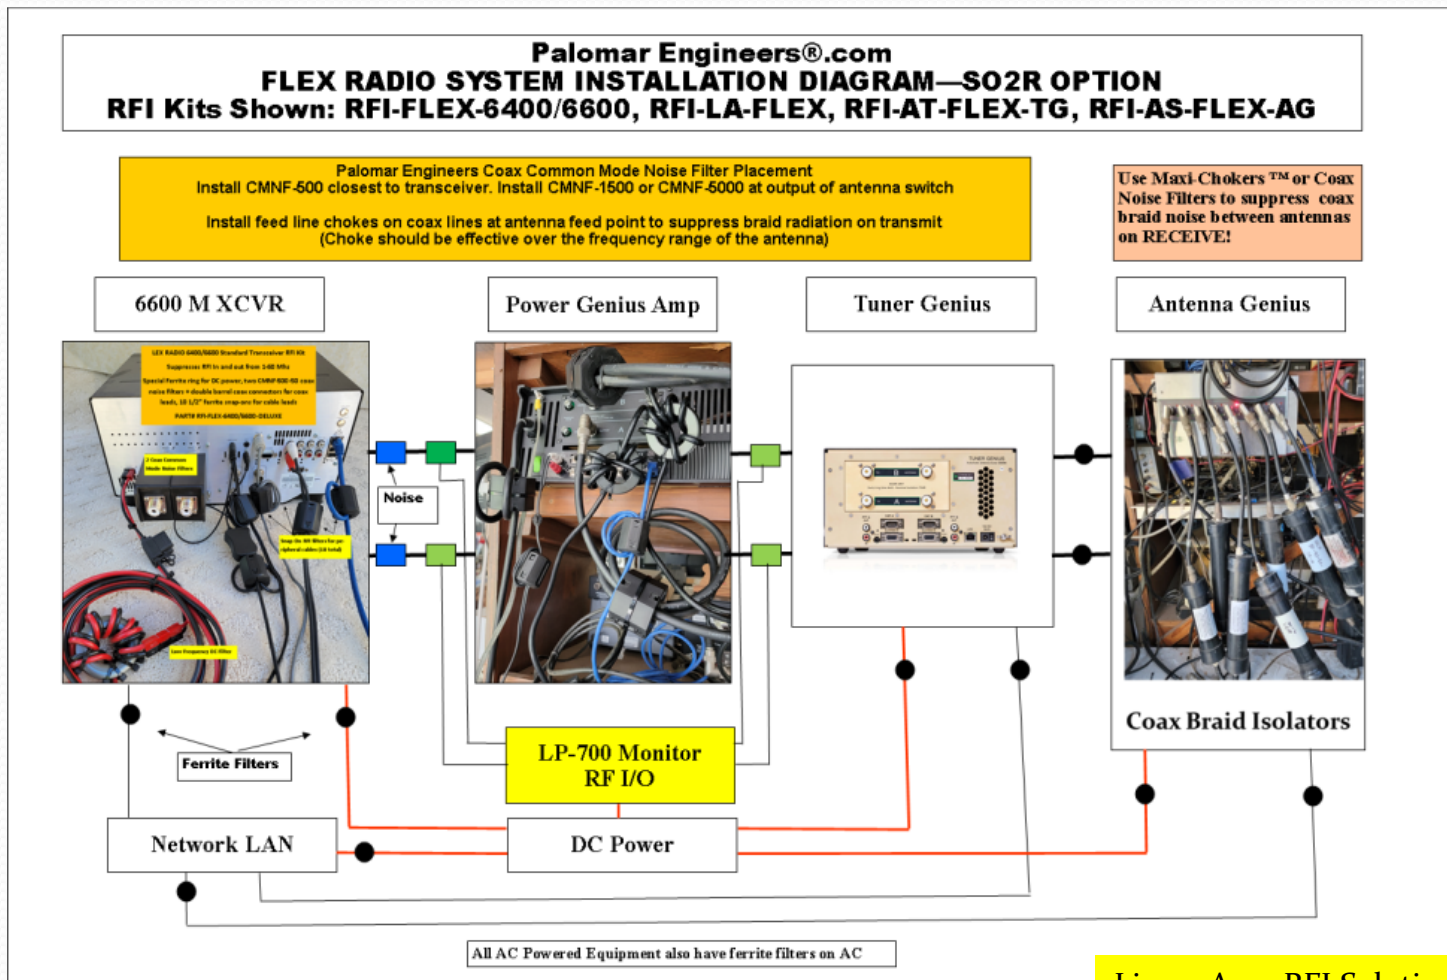

Linear Amplifier RFI Kits


Palomar has RFI kits for all brands of linear amps

Transceiver RFI Kit

Linear Amplifier RFI Kit



Ameritron 811

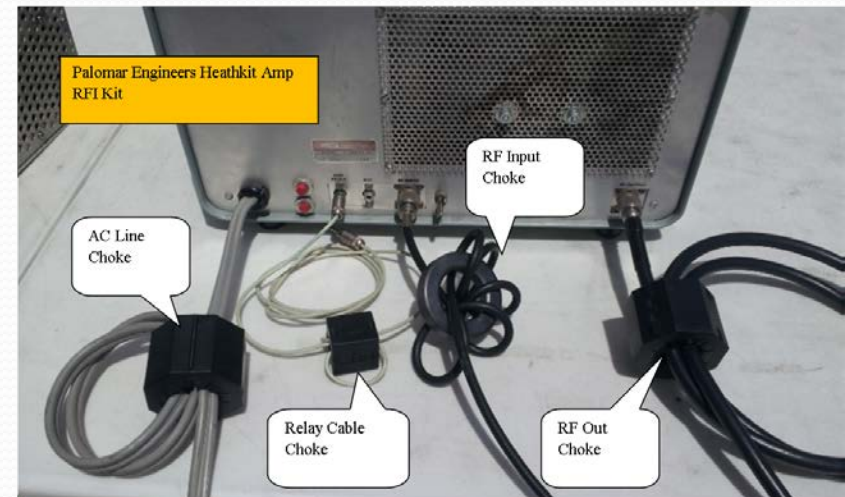

HEATHKIT SB220

Clean up the RFI **SOURCE** first – your radio and amp

Solution Kits for Tube and Solid State Amps

Now coax feed lines

Tip #2. Stop Transmit RFI current on coax braid



ALL coax fed antennas need a feed line
choke at the antenna feed point!!!!


OR

Your dipole will become a tripole or
Your unipole (vertical) will become a dipole
and your coax will radiate causing local RFI!

Q: How many conductors does coax have?

Is your Dipole a Tripole?

- Coax outside of braid acts as extension of transmitting antenna and extra receive antenna

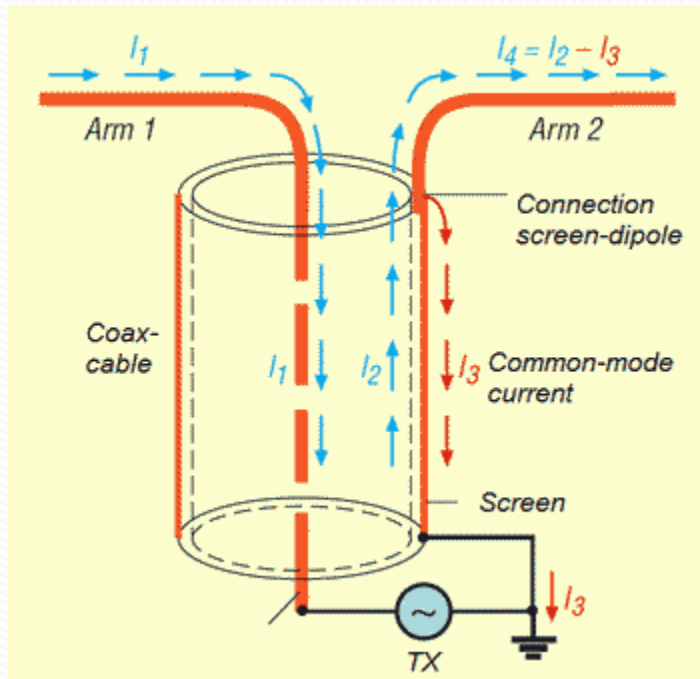


Coax cable has 3 conductors!

Coax braid is actually 2 conductors :
1 on the inside (normal RF signal), and
1 on the outside (common mode current)
that turns a dipole into tripole on transmit
or a second antenna on receive!

Goal is to reduce common mode current
with a feed line choke to keep all transmit
RF on antenna and use a coax noise filter to
minimize noise into receiver.

FYI: 1% common mode braid current = 2.75 watt radiation at 1500 watts input,
or 1.6 watts at 500 watts input or .7 watts at 100 watts input



Typical Coax Fed Antenna System

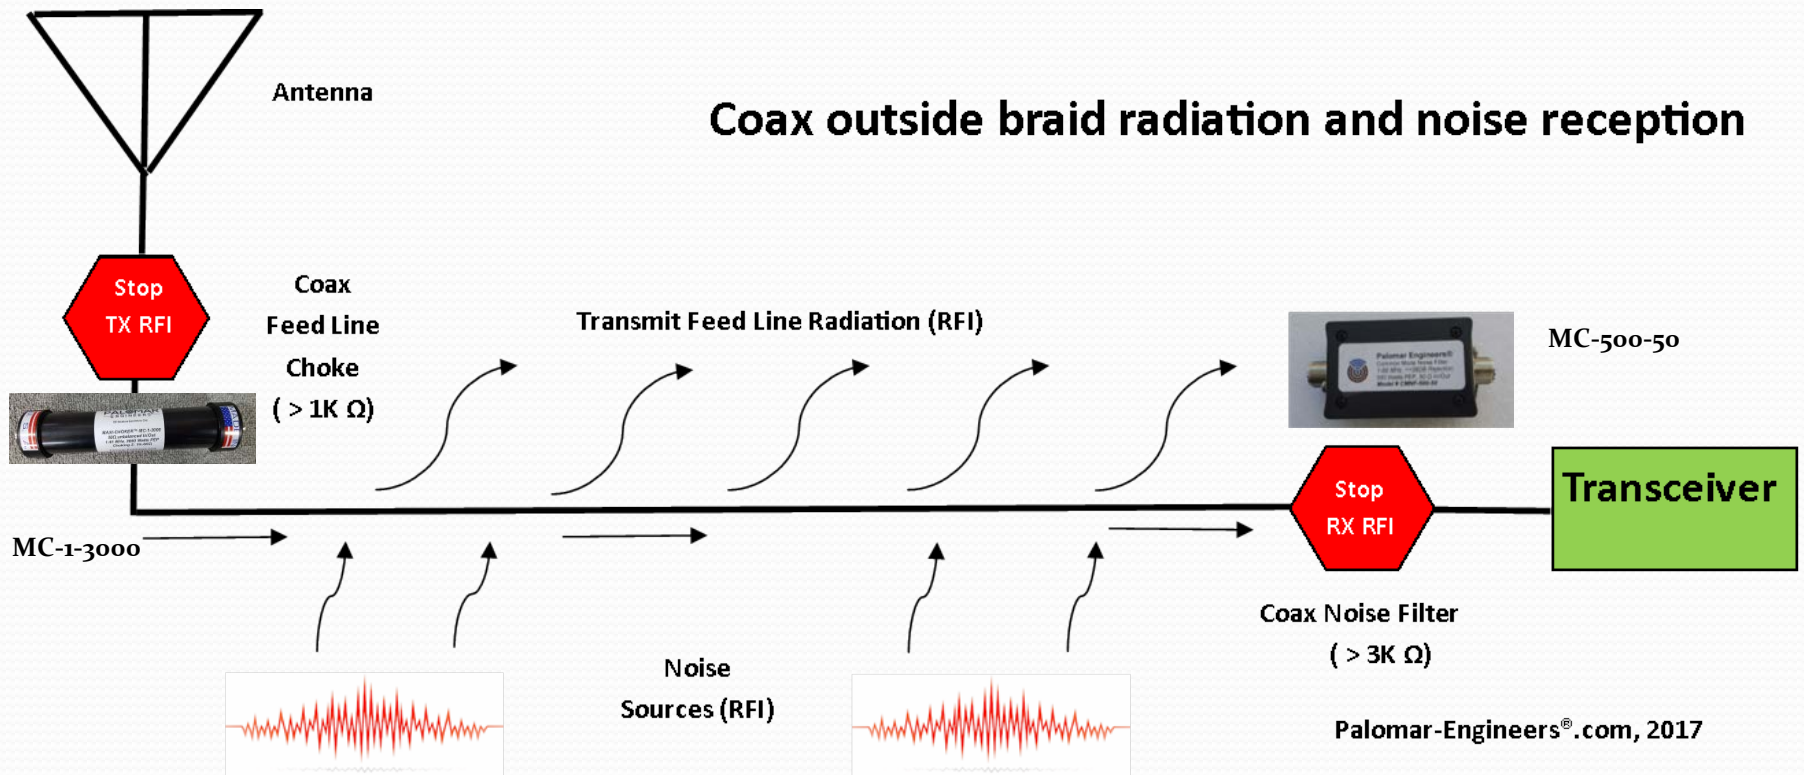

Technical requirements for feed line choke selection

Choose choke with CMRR > 20 dB over frequency range used

CMRR =
Common Mode
Rejection Ratio

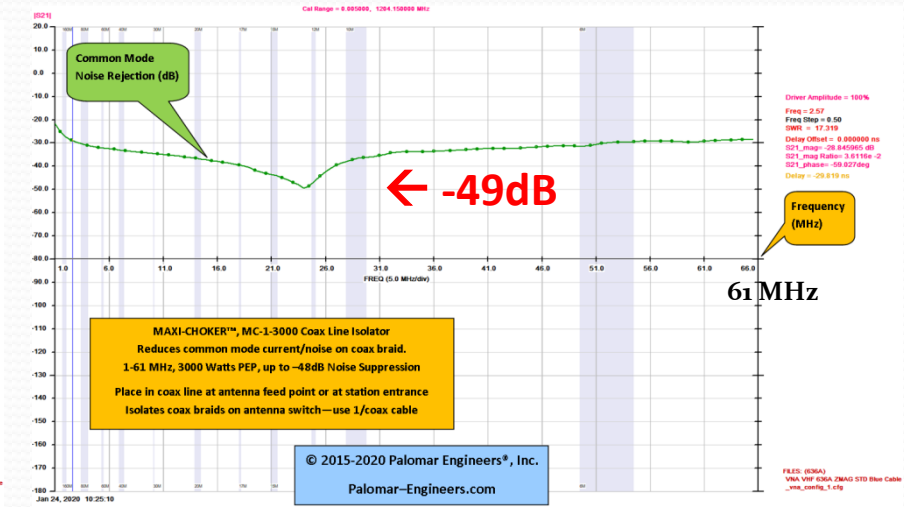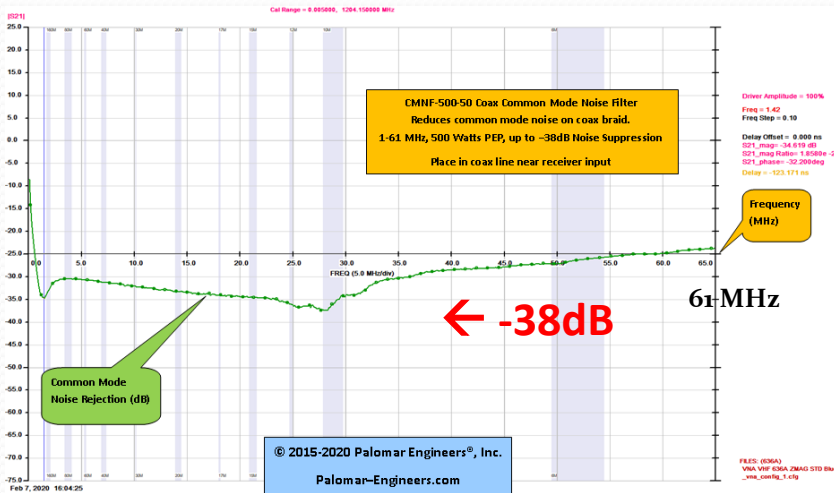

Coax Noise Filter (CMNF-500-50)
1-65 MHz >2K
500 Watts PEP, Up to 38 dB reduction (6 “S” units of common mode noise gone!



1 “S” unit = 6 dB, 36 dB = 6 “S” units



Line isolator (part# MC-1-3000 - 3KW PEP)
1-61 MHz >2K, 3KW PEP, 1K-6K ZΩ, 1 pound. All coax lines, Optional ground, static bleeder, up to 49 dB suppression!

DO NOT BUY CHOKES with NO SPECS!

Chokes for Antenna Feed Point



3KW Maxi-Choker™ on beam



1:1 Balun = choke with balanced output



Hybrid Baluns – 4:1 + 1:1 in same enclosure

DIY Chokes

Tip #3. Install Solution Specific RFI Victim Kits

Our Goal: Minimize Transmit RFI to Electronic Devices in your home
or your neighbor's homes



OR



Lots of Solutions Available

Transmit RFI Solutions

MY HOME or NEIGHBOR'S HOME



ALARM SYSTEM RFI



HOME THEATER RFI



COMPUTER RFI



MISCELLANEOUS RFI



GARAGE DOOR



TELEPHONE/DSL RFI


Recommendation: Use RFI kits for specific problems, have neighbor purchase and install – do not make mods to neighbors equipment! MOST problems are RFI picked up by AC power/phone lines so ferrite filters work well.

RX RFI FIXES

Tip #4. Install Coax Noise Filter to Suppress RX RFI

Less common mode noise current (RFI) = More DX!
How to select and install filters for maximum effect

Quick Test
for Common
Mode RFI

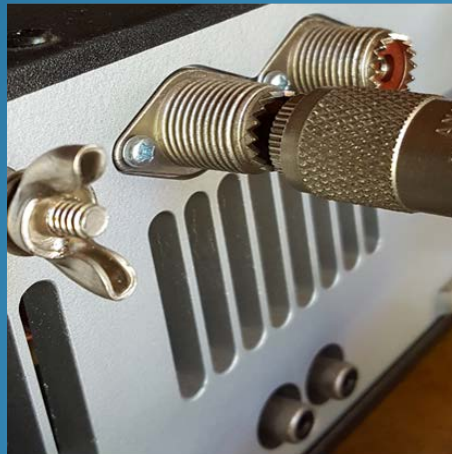

Coax Center Conductor Only—measure noise level



Coax Center Conductor and outer shield — measure noise level. If higher, then you have common mode noise


Best kept secret!



Typical Coax Fed Antenna System

Common Mode RFI picked up on coax braid to radio

Coax outside braid radiation and noise reception

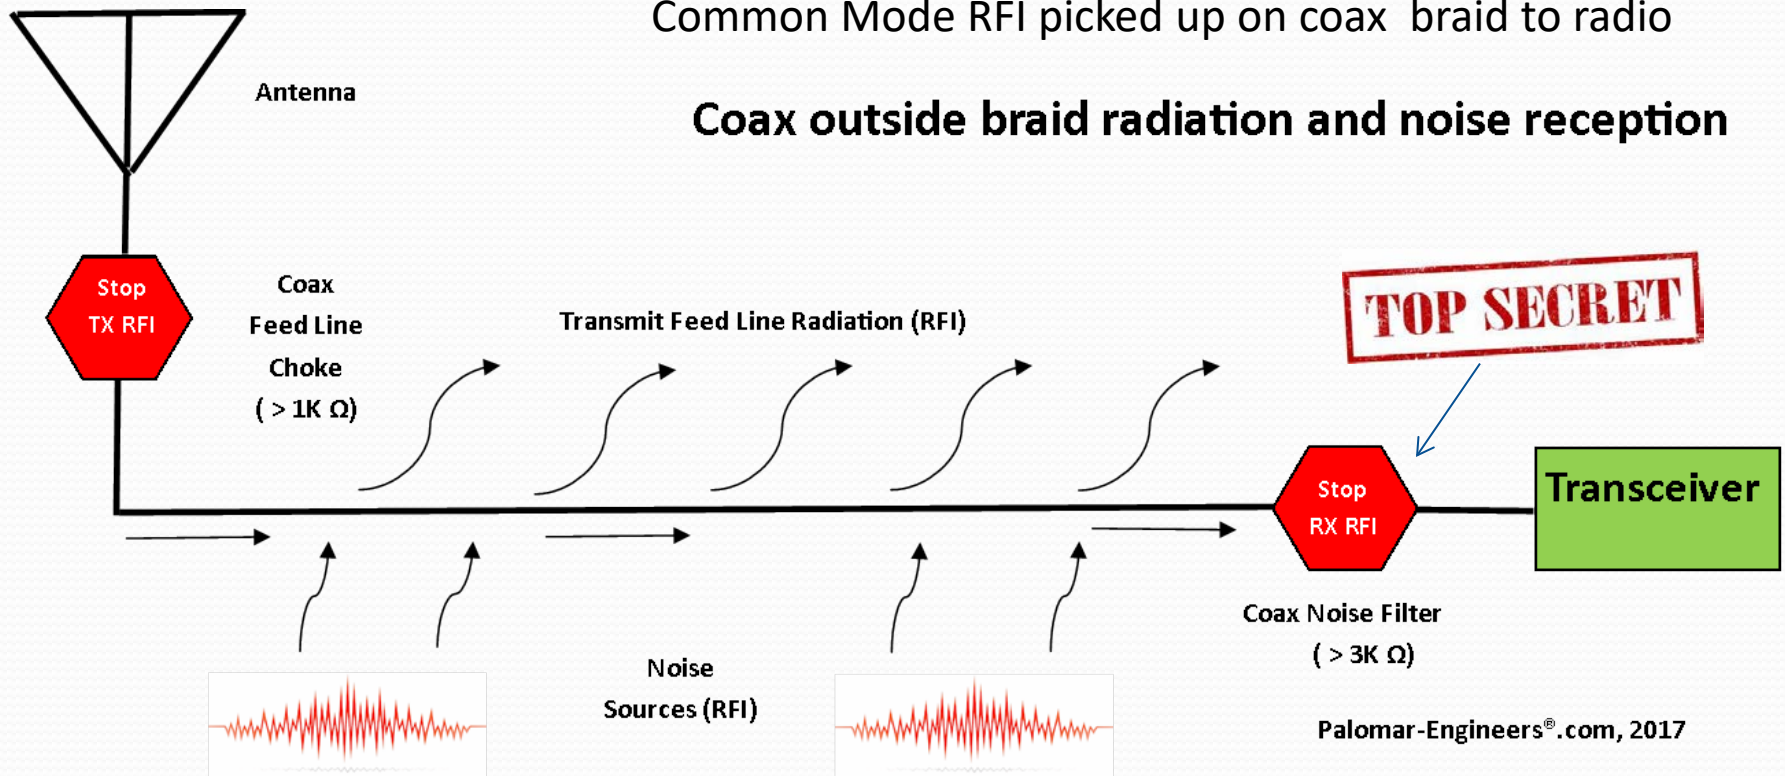

Palomar-Engineers®.com, 2017

Typical Sources of RFI

Coax Noise Filter Specs


TOP SECRET

>>> One of the best kept secrets in ham radio!!! <<<



1.5KW
or
5KW

500
Watts

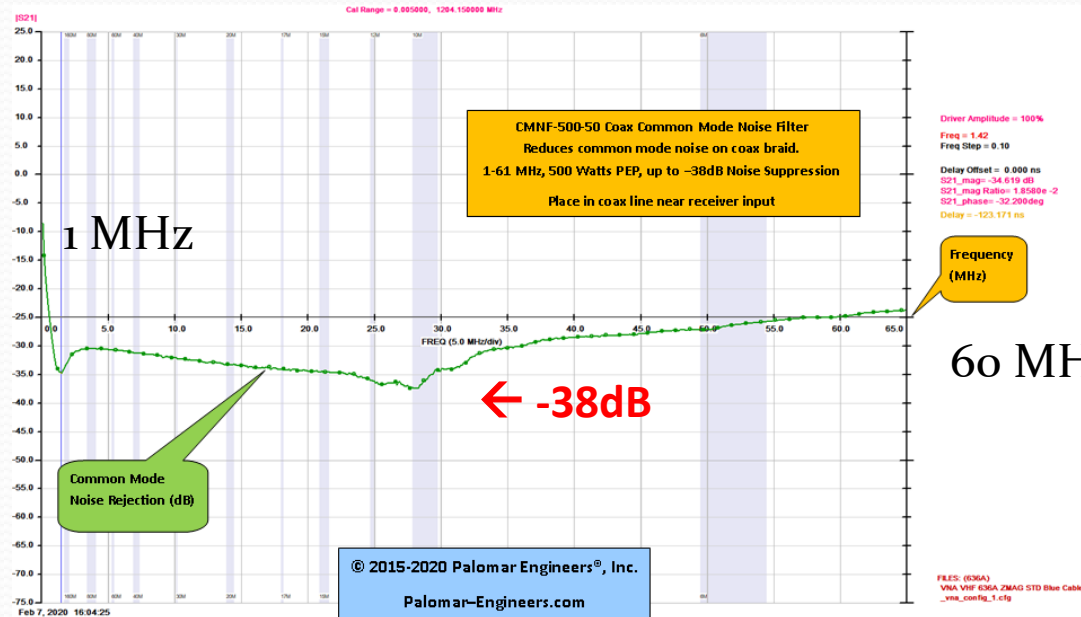


Placed at RADIO END of coax feed line to suppress common mode current on coax braid between antenna feed point choke and radio

1 "S" unit = 6 dB, -36dB = 6 "S" Units

Station Install Points

Coax Noise Filter Installation

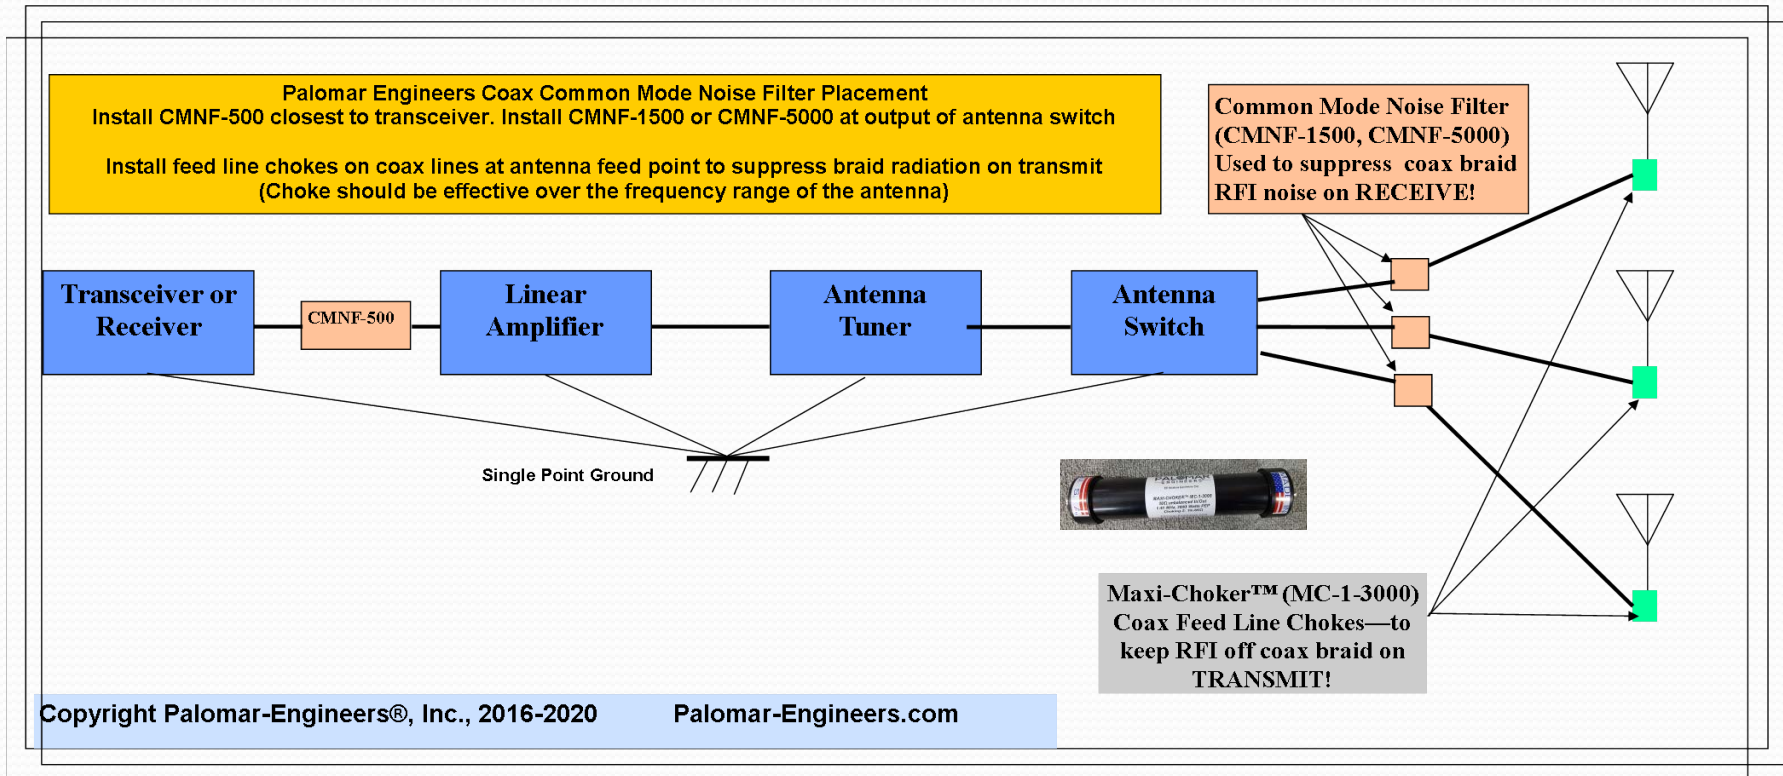

Where to Install

- Choke at antenna for TRANSMIT RFI
- Noise Filter at Antenna Switch for RECEIVE RFI
- Between Transceiver and Amplifier
- Single point ground system

Antenna Switch Solution

Antenna Switch Solution

ANTENNA SWITCH PROBLEM
 During RECEIVE, you have 2 RECEIVE antennas per coax: the signal down the center of the coax + the signal picked up by the OUTSIDE braid of the coax and they COMBINE at the coax connector unless suppressed by a coax noise filter! All coax braids are connected at the switch so you may be hearing noise from the braid of an unselected antenna! Use filters on each coax line before the switch!

TRANSEIVER OR LINEAR AMPLIFIER


Antenna Switch (only switches center conductor)

If no common mode noise filters, noise = CN1+CN2+CN3 regardless of antenna switch position!
 You always have 4 antennas—1 center and 3 braids!
 CN1=common mode noise on coax braid 1, etc.

For common mode and RFI solutions contact Palomar-Engineers®.com

Mini/Maxi-Choker™ or Common Mode Noise Filter used to suppress coax braid RFI noise (CN1, CN2, CN3) during RECEIVE!
 MC-1-500 = 500 Watts
 MC-1-3000 = 3KW
 MC-1-5000 = 5KW

Mini/Maxi-Choker™ Coax Feed Line Chokes—to keep RFI off coax braid on TRANSMIT!
 MC-1-500 = 500 Watts
 MC-1-3000 = 3KW
 MC-1-5000 = 5KW

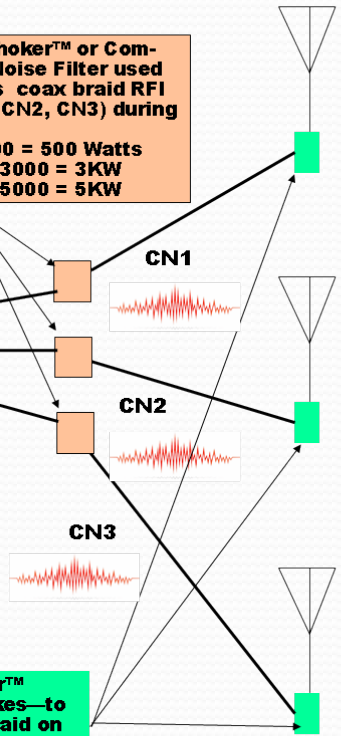

500 watt Mini-Chokers



Coax Braid Isolators

Suppress RFI Receive Noise Recap

- Perform simple noise test on your radio
 - Unplug your antenna and see if all the noise goes away – if not, noise is entering from another wire into radio – probably power supply – install transceiver RFI kit on all lines
 - Perform common mode test with antenna coax – if noise increases when you screw in the outer coax connector you have common mode noise and need a coax noise filter. IF no change then ferrite filters won't help and you will have to kill the path or stop the SOURCE
 - If you have an antenna switch unplug all antennas and perform the above test on each antenna coax individually and install coax noise filters as needed
- Consider additional filters and paths if RFI persists

If you need help
Call or email (sales@Palomar-Engineers.com) or view specific solutions at
Palomar-Engineers.com

What if you are a ferrite newbie? →→

Receive RFI Solution

Transmit RFI Solution

Tip #5. Use Ferrite Combo RFI Kits for Newbies

Ferrite Combo Kits for Troubleshooting Multiple RFI Issues include multiple ferrite shapes and sizes

or

$\frac{1}{2}$ " ID snap-ons and 1.4" ID rings are the most popular sizes and can be used to solve most ham radio HF RFI problems



Buy 9
Get 1
FREE!



Use Discount code "NEWBIE24" – get 10% off orders thru 06/30/2024

Test Time

Prize Question #1

- What are the 2 best ways to increase the choking resistance of a ferrite filter?
 - A) Use high resistance wire and multiple turns on bead
 - B) Use multiple turns and double shield coax
 - C) Use multiple beads in series with multiple turns
 - D) Use mix 31 and mix 75 beads in series with a single turn

Prize Question #2

Mix 61 is used in which frequency range to suppress RFI common mode current?

- A) 1-300 MHz
- B) 200-2000 MHz
- C) .15-5 MHz
- D) 1-2000 MHz
- E) CB Band Only

Prize Question #3

TOP SECRET

- What is one of the best kept secrets in ham radio?
 - a) Ladder line has more loss than coax
 - b) A coax wound choke can cover all frequencies from 160-6 meters if the coax is long enough
 - c) All ferrites work on all frequencies, so buy the cheapest
 - d) Coax noise filters reduce common mode noise level in your receiver so you can hear more stations
 - e) All extra class hams go to heaven

BONUS Question

Bonus Prize Question #4

- Which company is your best source for RFI & HF Wire Antenna solutions?

RFI Solutions Experts



RFI Solutions from KHz to GHz

- Website: www.Palomar-Engineers.com
- Email: Sales@Palomar-Engineers.com
- Phone: 760-747-3343
- Bob Brehm, AK6R – Chief Engineer
- This presentation available on the website.

New Antenna if time

Bullet-4006 – OCF End Fed



Bullet OCF End Fed Antenna System
40-30-20-17-15-12-10-6 Meters
Wire: 55 FT, Choke at 12 FT
100 Watts PEP/100 Watts Digital

Part# BULLET-4006-100



Bullet OCF End Fed Antenna System
40-30-20-17-15-12-10-6 Meters
Wire: 55 FT, Choke at 12 FT
500 Watts PEP/300 Watts Digital

Part# BULLET-4006-500



Bullet OCF End Fed Antenna System
40-30-20-17-15-12-10-6 Meters
Wire: 55 FT, Choke at 12 FT
1500 Watts PEP/750 Watts Digital

Part# BULLET-4006-1500



55' Wire, Choke on coax at 12'

Also Available:

Bullet-2006: 20-17-15-12-10-6, Wire length = 25', choke at 7'

Bullet-8006: 80-40-30-20-17-15-12-11-10-6, Wire = 95', choke at 40'

Config →


Palomar End Fed OCF Antenna

- **Pros**

- Wire length < 1/2 wave
- 40-30-20-17-15-12-10-6
- Stealth for HOA
- Ultra broadband 4:1 unun
- Total antenna is 55+12 = 67', but with lower SWR like OCF
- Safe & simple low voltage matching

- **Cons**

- Coax acts as counterpoise and radiates (OCF)
- Some bands may require antenna tuner in radio

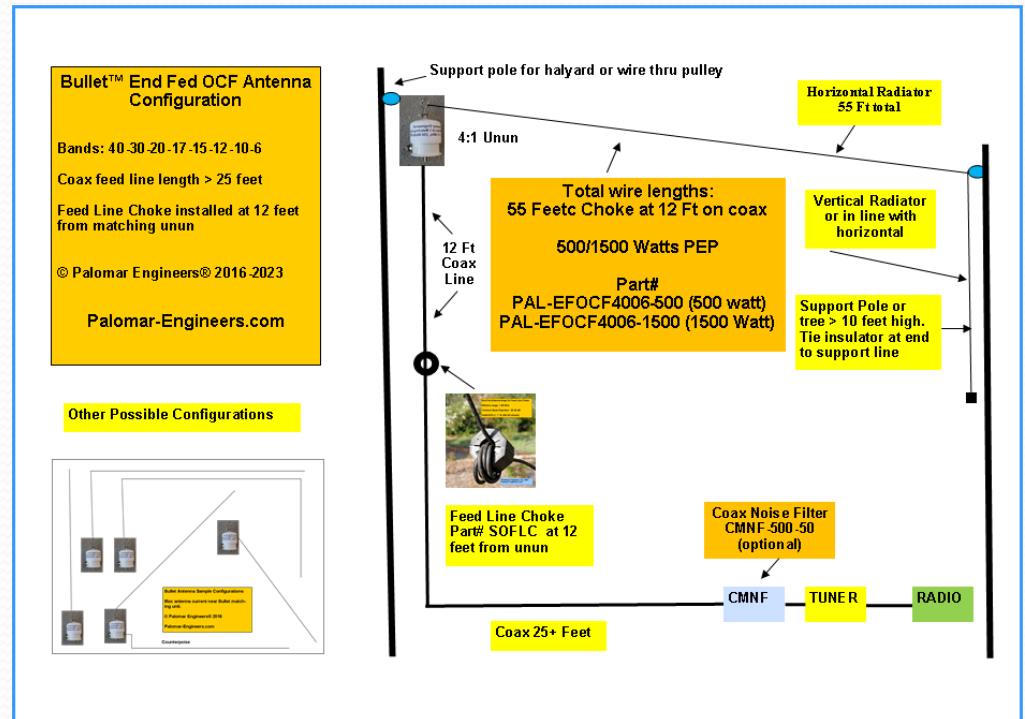


PART#: BULLET-4006-100/500/1500

BULLET-4006 SWR

Bullet-4006 SWR 40-6M

55' Wire = 8 Bands

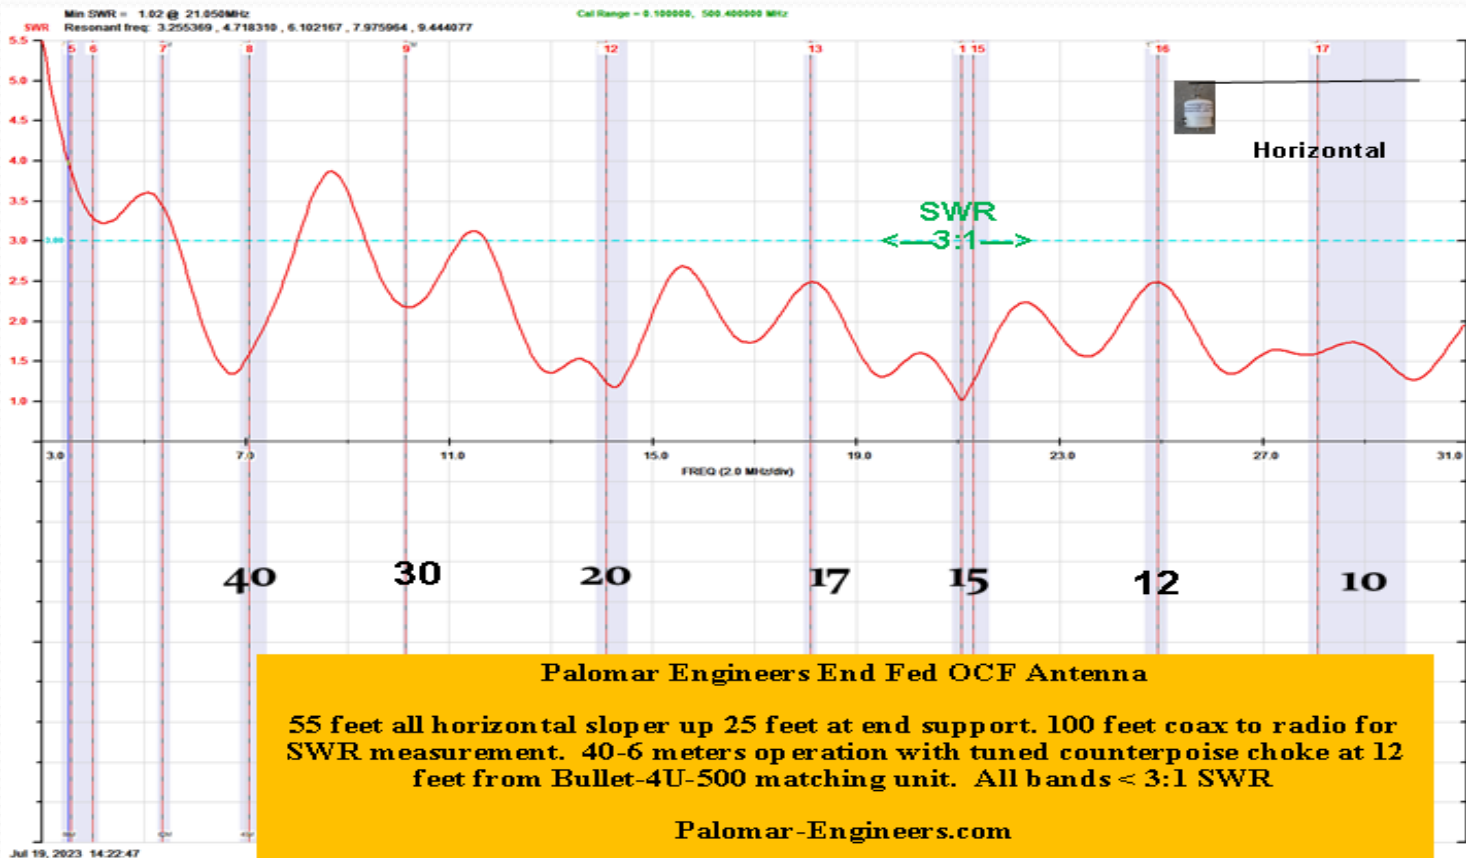

Shorter than EFHW, No Hi Volts, ALL BANDS 40-6 Meters